

TEMPTRAC - How to Setup a Custom Report in Geotab

HOW TO SETUP THE SOFTWARE:

1. Download the report from the Geotab Marketplace to local computer.
2. Upload the report into the customer's database by selecting: Administration > Reports > Report Views > Add Excel File > Drag and drop the downloaded report into MyGeotab.
3. Add the following diagnostics:
 - ▶ Peripheral device: reefer temp zone 1 (type: Telematics Device; code: 2211; controller: undefined),
 - ▶ Peripheral device: reefer temp zone 2 (type: Telematics Device; code: 2212; controller: undefined),
 - ▶ Peripheral device: reefer temp zone 3 (type: Telematics Device; code: 2213; controller: undefined),
 - ▶ Peripheral device: reefer temp zone 4 (type: Telematics Device; code: 2214; controller: undefined),
 - ▶ Ignition
4. Save the report.
5. To run the report visit: Engine & Maintenance > Engine Data > Engine Measurements > Options > "Last Month" > View > "Valor Temperature Report".
6. This is what you will see:



7. You can now export the raw excel document (if required).