
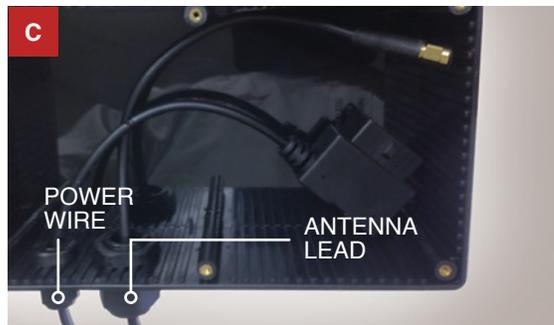
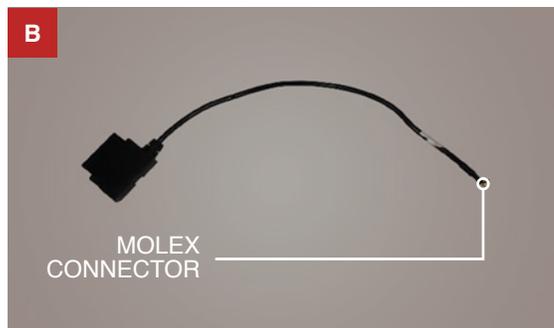


## TEMPTRAC - How To Install A Water-Resistant Case

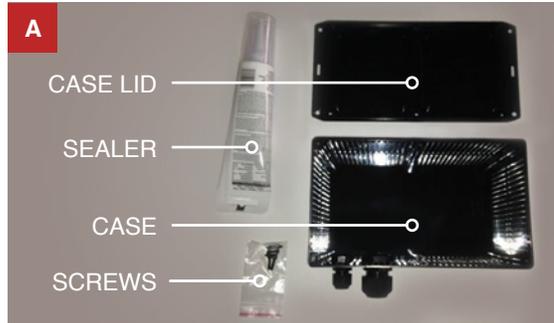

### How To Install A Water Resistant Case For The Valor + Geotab TempTrac Setup

1. Open and ensure all proper components of the water-resistant casing are included in your kit. (Figure A)
2. If you are using the Valor + Geotab setup (see diagram below) and want to use the Geotab three-wire modification option, remove the Molex connector. *Connector not supplied in kit.* (Figure B)
3. Insert power-wire and antenna-lead into correct fittings and tighten fittings accordingly. Then apply sealer (included in the kit) directly into the fittings. (Figure C)
4. Apply sealer to the inner raised lip of the case lid. Follow the raised lip entirely and apply to both sides of the lip to ensure it seals. (Figure D)
5. The final step is to place the case lid on the case and fasten with the supplied screws to ensure it stays in place.

### Valor + Geotab Setup

